

Readers

Dear customers, your use of the broadcasting company speaker series. We would like to extend my heartfelt thanks to all of the Company manufactured products have been tested before, the commitment to keep its quality. Loud - speakers broadcast Pan-for hotels, commercial buildings, supermarkets, schools, leisure and entertainment venues, is your ideal choice. For your installation, commissioning and use of this product, the installation please read this note.

Safety Tips

- Please be sure to use the former reading detailed notes.
- Really pay attention to this manual and a safety with the important warning.
- Recommend that you keep this manual for future reference.

Common warning signs and security

The manual shown warning signs and security is to prevent the improper operation due to personal injury arising from the loss of property, please read before using this product must understand that this manual security symbols and Warning to indicate fully aware of potential risks.

 Warning Such as the inappropriate use of staff will cause injury, death and property damage.
--

When installed loudspeakers

- Restricted by the provisions of the speakers on the voltage, such as the use of high voltage may cause electric shock or fire disaster. Is no pruning, distorted, or replacement of damaged wires.
- Avoid instability in the installation or set up speakers, such as shaking the table or flat surface, the speaker can avoid falling caused personal injury or property damage.
- Speakers will be installed in support of the speaker or the weight of a solid shelf. Speaker swap can be avoided caused personal injury or property damage.
- Wet hands must not be admitted into or plugs, may lead to electric shocks.
- The allocation of plugs, make sure that pull plugs, rather than pull wires. The use of a damaged power line of machinery may cause fire or electric shock.
- Mobile speaker, you plug the prior allocated. If the speaker and plugs may be moving together will cause fire or electric shock. For plugs, identified as plugs for grip.
- Will not be allowed to speakers on the vent cover. May cause internal heating caused by the fire.
- Avoid speakers installed in the humidity or dust, direct contact with the sun, from the near-electric, or smoke or steam, may cause fire or electric shock.

itC


Column Speaker




T-901P/902P

OWNER'S MANUAL

Dimension

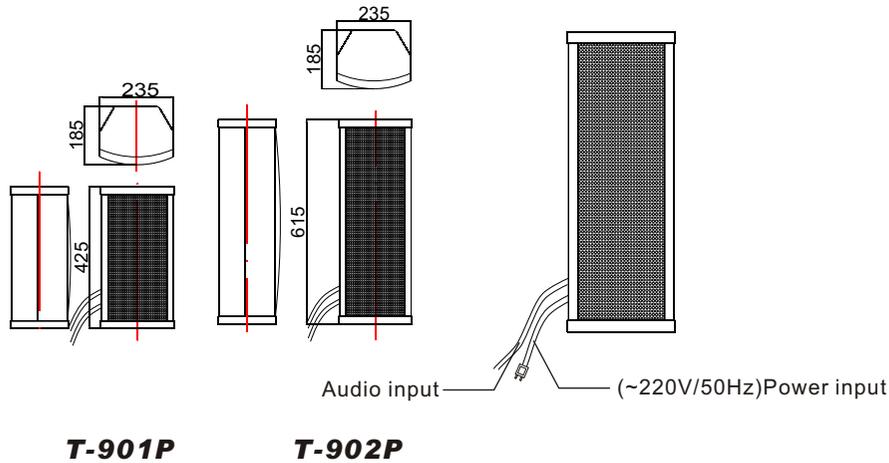

Installation

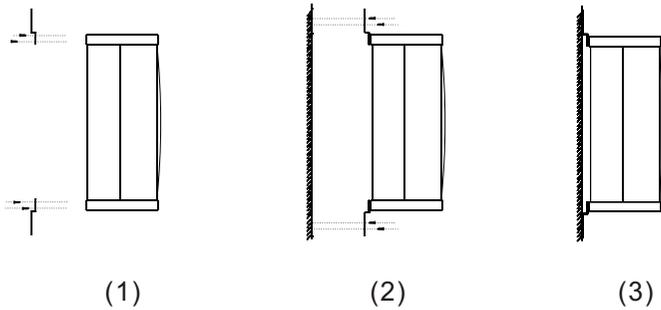

- Step 1: the parts of the monolithic column speaker and the button with a screwdriver fixed tight.
- Step 2: In the open screw holes on the walls, and then the iron column speaker to the wall by the screw holes with screws on the column speaker wall plate and fixed.
- Step 3: End of the completion of the column speaker installed.

Specifications

Model	T-901P	T-902P
Rated power	20W	40W
Max power	30W	60W
Line Sensitivity	0.775V/10K Ω	0.775V/10K Ω
SPL(1W/1M)	85dB \pm 3dB	91dB \pm 3dB
Line volt	~220V/50Hz	~220V/50Hz
Freq Resp	110-18KHz	110-18KHz
Dim(mm)	185X235X425	185X235X615
Weight	6Kg	8.5Kg

Labels stickers

55

35

itC COLUMN SPEAKER		
Model	T-901P	T-902P
Rated power	20W	40W
Max power	30W	60W
Line volt	~220V/50Hz	