 
 


T-5S/T-15S/T-25S/T-35S/T-45S T-5FS/T-15FS/T-25FS/T-35FS/T-45FS
T-7S/T-17S/T-27S/T-37S/T-47S T-7FS/T-17FS/T-27FS/T-37FS/T-47FS
T-9S/T-19S/T-29S/T-39S/T-49S T-9FS/T-19FS/T-29FS/T-39FS/T-49FS
(With separated torroidal transformer)

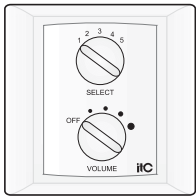

T-5S/T-15S/T-25S/T-35S/T-45S
T-5FS/T-15FS/T-25FS/T-35FS/T-45FS

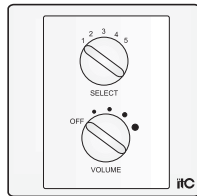

T-7S/T-17S/T-27S/T-37S/T-47S
T-7FS/T-17FS/T-27FS/T-37FS/T-47FS



T-9S/T-19S/T-29S/T-39S/T-49S
T-9FS/T-19FS/T-29FS/T-39FS/T-49FS



Plastic box



Metal box

Specifications

Model	T-5S/T-7S/T-9S	T-15S/T-17S/T-19S	T-25S/T-27S/T-29S	T-35S/T-37S/T-39S	T-45S/T-47S/T-49S
Rated Power	6W	30W	60W	120W	200W
Type	Resist	Trans	Trans	Trans	Trans
Steps	5	5	5	5	5
Parts	3.5 × 2.0 Screw				

Model	T-5FS/T-7FS/T-9FS	T-15FS/T-17FS/T-19FS	T-25FS/T-27FS/T-29FS	T-35FS/T-37FS/T-39FS	T-45FS/T-47FS/T-49FS
Rated Power	6W	30W	60W	120W	200W
Type	Resist	Trans	Trans	Trans	Trans
Steps	5	5	5	5	5
Parts	3.5 × 2.0 Screw				

Attn: "F" means 24v input

1. T-5S/T-5FS, T-7S/T-7FS, T-9S/T-9FS can use standard common plastic bottom box (L86× W86× H50mm) for installation, for other models, if do not use special metal box when installation, you has to fix the transformer in other position, and coonect the down-lead to the volume control switch.

2. You have to use our special metal box (L82.5 × W82.5 × H80mm) If use special metal box when installation. Special bottom box you have to buy by yourself.